

Vacuum Cleaner

USER MANUAL

MP08KRGY-DS

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.
The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

SAFETY INSTRUCTIONS 02

MACHINE COMPONENTS 06

INTRODUCTION TO THE PRODUCT 07

LITHIUM BATTERY 10

GEAR INDICATOR LIGHT 11

USE OF VACUUM CLEANER 13

CLEANING AND MAINTENANCE 21

TROUBLESHOOTING 26

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT 29

DISPOSAL AND RECYCLING 29







DATA PROTECTION NOTICE 30

SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of symbols

	Danger This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.
	Warning of electrical voltage This symbol indicates that there is a danger to life and health of persons due to voltage.
	Warning The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.
	Caution The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
	Attention The signal word indicates important information (e.g. damage to property), but not danger.
	Observe instructions This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

Important Safety Instructions

Do not place the vacuum cleaner close to heat sources, radiation sources or burning cigarette butts. Sucking in the following objects is strictly forbidden:

1. All liquids such as water and solvent;
2. Construction dust and trash such as lime and cement dust.
3. Heat sources, such as carbon butts and cigarette butts that have not been put out.
4. Sharp fragments, such as glass.
5. Flammable and explosive articles, such as gasoline and alcohol products.

- This product can only be disassembled by authorized technical personnel. Disassembling without guidance is strictly forbidden.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product is an indoor household product, please do not use it outdoors.
- The vacuum cleaner is an electric appliance that must be used under normal use conditions. Do not leave it unattended while running.
- Do not touch the power cord, socket or power adapter with wet hands or operate without shoes.
- Clean the dust cup when it is full before using this product.
- Turn off the power when cleaning, repairing or not using the vacuum cleaner. - Do not immerse the vacuum cleaner in water or place it near heat sources or in the sun, so as to avoid fire.
- Power cut-off: Do not pull the power cord, hold the plastic part of the plug with your hand and unplug the plug.
- Turn off the power when taking out the battery. Do not disassemble the battery by yourself. If you need Please contact the after-sales maintenance personnel for replacement if needed. Please properly dispose of the battery when discarding the product.

Important Safety Instructions

- Do not touch the pole piece or jack with conductors to avoid short circuit.
Power cut-off: Do not pull the power cord, hold the plastic part of the plug with your hand and unplug the plug.
- Do not pass the power cord of the vacuum cleaner through sharp objects, so as not to damage the power cord.
- Do not drag the power cord to move the charging base.
- Check the power supply voltage to ensure the same voltage as the charging voltage of the vacuum cleaner.
- Avoid running for a long time when the suction inlet is blocked, so as to avoid motor damage and heating deformation of the vacuum cleaner.
- This vacuum cleaner creates suction. Keep hair, loose clothing, fingers, and all part of body away from openings and moving parts.
- Do not use without dust bag or filter(s) in place.
- Store you cleaner indoors in a cool, dry area.
- Do not place a container of water on an electrified product, as water entering the interior of the product can weaken the electrical insulation and lead to electric shock, fire, etc.
- Please entrust professional personnel (authorized service centers) for installation and maintenance.
- Keep your work area well lit - Unplug electrical appliances before vacuuming them.
- Do not use the vacuum cleaner and send it to the maintenance department designated by Midea for maintenance in time under the following circumstances:
 1. The vacuum cleaner has obvious damage or abnormal operation condition after falling to the floor.
 2. The power cord is damaged.

Warning


- For the purposes of recharging the battery, only use Base Station DS001 provided with this appliance.
- The DS001 can provide charging for the batteries with model BP25920A, and the rated capacity of the BP25920A is 2000mAh.
- Please do not recharging non-rechargeable batteries.

Tips

1. Longer charging time may be needed in the following circumstances.
 - a. When charging in a place where the indoor temperature exceeds 30°C;
 - b. When charging immediately after stopping running.
2. Please charge the vacuum cleaner after using no matter how long it is used.
3. When not charging, it is recommended to unplug the power plug in time.
4. If the vacuum cleaner is not in use for a long time (more than 2 months), please unplug the power plug, but in order to ensure the battery life, please fully charge it every 2 months.
5. During charging, the machine may heat up, which is a normal phenomenon. Please rest assured to use it.

MACHINE COMPONENTS

Installation and Parts

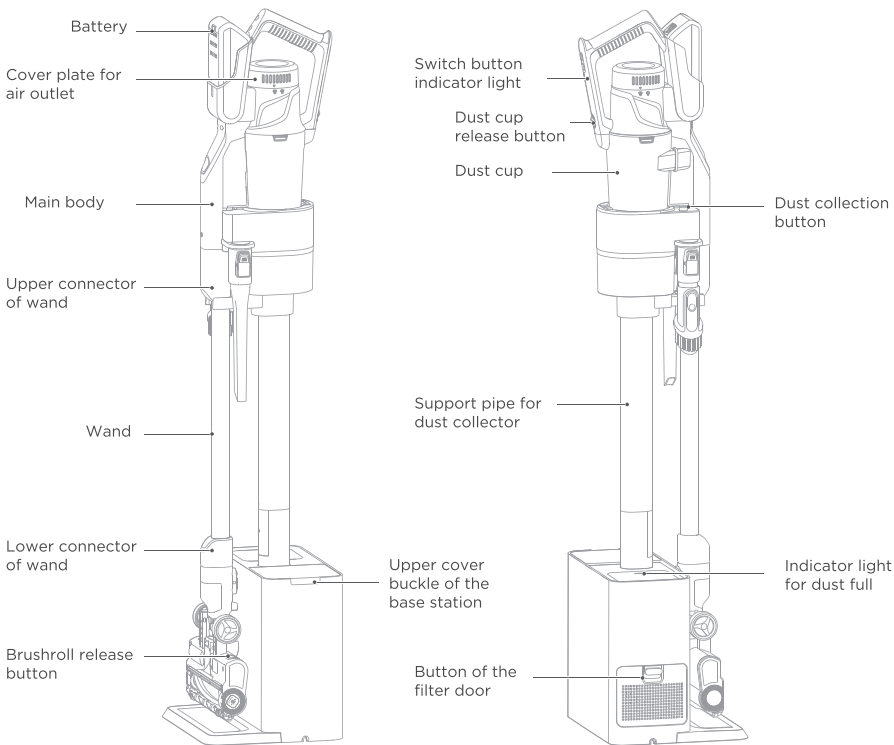


List of Accessories



Upholstery brush



 Crevice tool

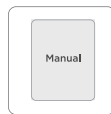

Instructions




Dust bag

INTRODUCTION TO THE PRODUCT

Wireless Self-cleaning Vacuum Cleaner Assembly

1. Slide the battery into the compartment in the handle until it clicks into place.
2. Align the hand vacuum nozzle opening with the top of the wand and slide it on until it clicks into place.
3. Slide the wand into the floor nozzle until it clicks into place.

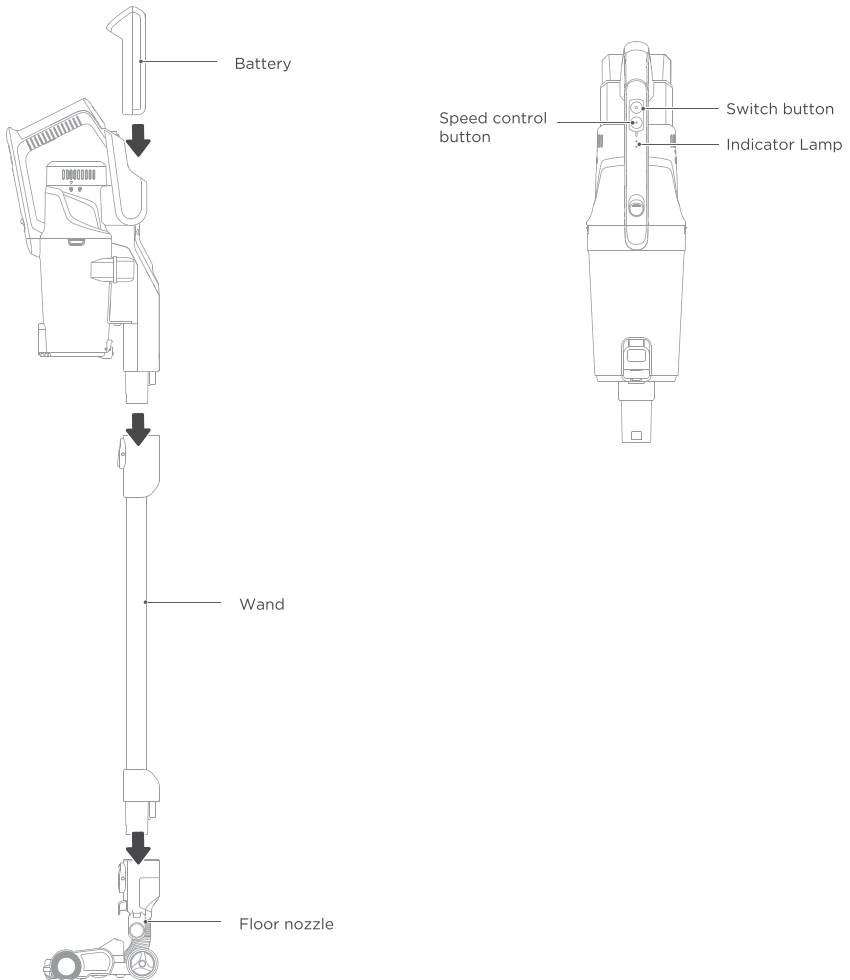


Base Station Assembly

4. Insert the bottom of the dust collector assembly into the connector of the base station assembly until you hear a "click".
5. Place the base station on the ground near the wall socket and insert the plug into the socket.




Attention

before assembling the base station assembly, release the power cord to the length you need, up to 1.3 meters long.

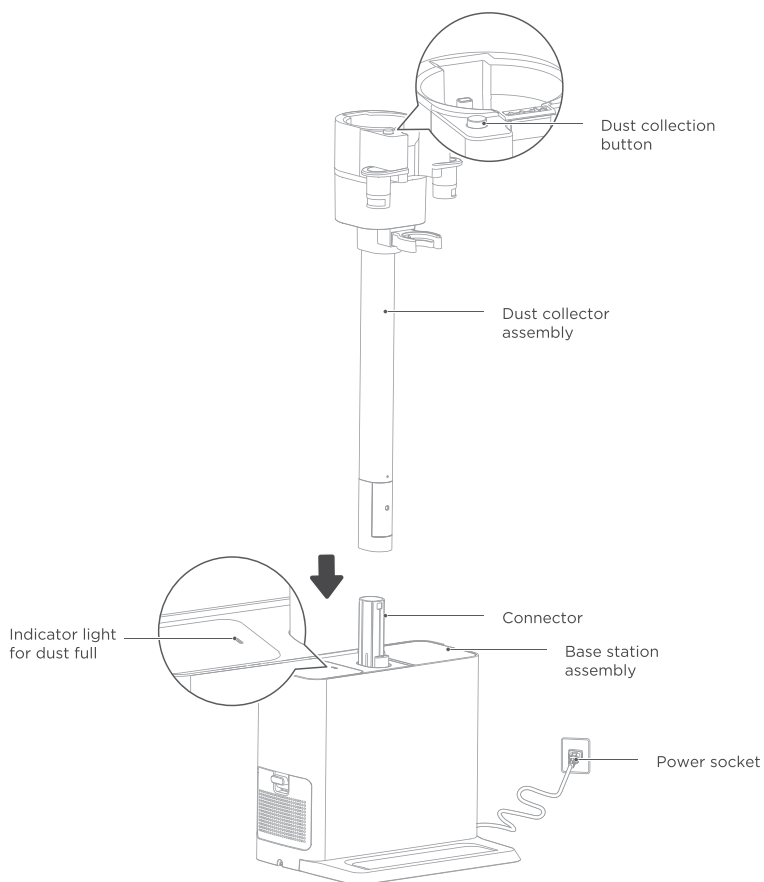

Base Station Assembly

6. Align the bottom of the vacuum cleaner's dust cup with the suction inlet of the dust collector assembly until a "click" sound is heard, indicating proper installation.

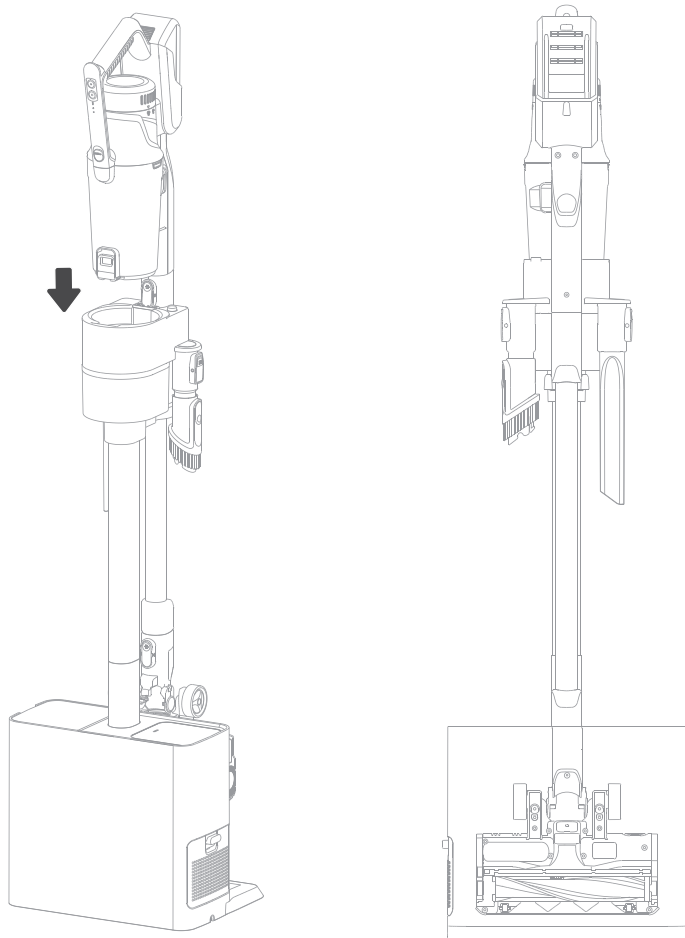

LITHIUM BATTERY




Attention


1. Fully charge the battery before first use.
2. Do not charge below 5 °C or above 40 °C.
3. The battery indicator light on the handheld appliance will flick when the battery level is low during operation.
4. Please replace the battery when the appliance's battery life significantly decreases and charging time increases.

Led Indicator for Charging Status

The lower battery indicator LED is flicking, indicating an incomplete charge.

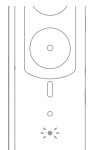


The two battery indicator LEDs remain on for 10 minutes and then turn off, indicating that the battery is fully charged.

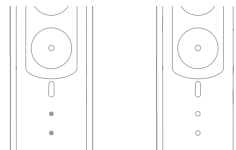

Charging time: It takes approximately 3 - 5 hours to fully charge.


Led Indicator for Usage Status

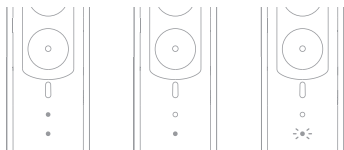

Sufficient battery: the two lights are constantly ON;
Medium battery level: one light is constantly ON;
Low battery: One light flicking.
End of dust collection at the base station: Two battery indicator LEDs remain ON for 5 seconds.

Indicator Description of Special States

The simultaneous flicking of three LED lights and the Indicator light for dust full is flashing red indicate the need for bag replacement in the base station.

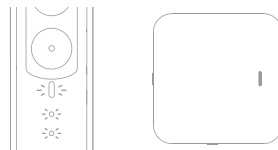

GEAR INDICATOR LIGHT



Low speed mode



Medium speed mode



High speed mode


Low speed mode: The speed indicator light not work.

Medium speed mode: The speed indicator light is ON with white light.

High speed mode: The speed indicator light is ON with blue light.


Charging in Storage Mode

Place the handheld appliance on the charging body of the base station for charging, ensure that the contact springs align with the contact points. When charging is complete, simply remove it for use.

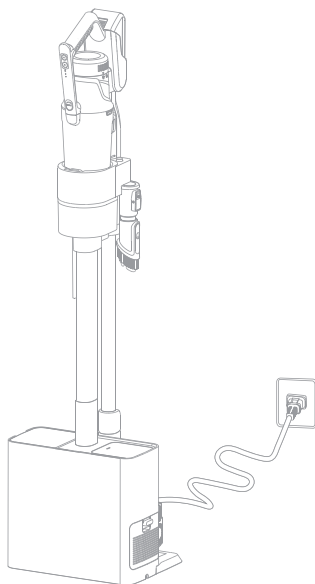


Remove the Handheld Vacuum Cleaner From the Wand

Please press the front buckle release button to detach the handheld vacuum cleaner from the wand. To reconnect, align and slide the handheld vacuum cleaner onto the top of the wand until it clicks into place.

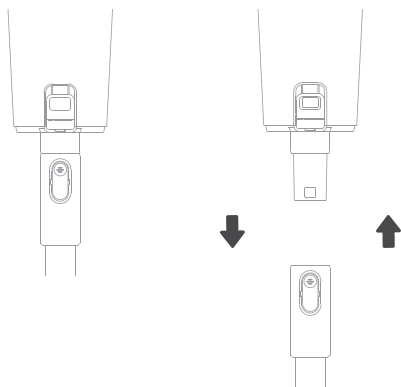


Removing the Battery

1. Press the release button on the battery cover;
2. Pull out the battery in the direction indicated by the arrow;
3. To reinstall the battery, slide it into the compartment until a "click" sound is heard, indicating proper installation.

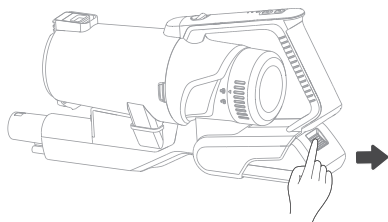


USE OF VACUUM CLEANER

Control Mode

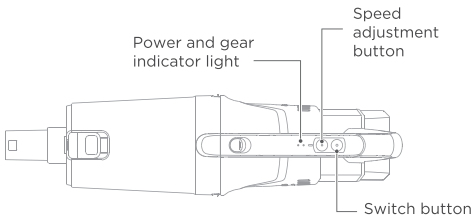

Press the switch button on the handle to power on. To turn off, press the button again. Use the speed adjustment button to switch between low, medium, and high speed modes.

Use A Handheld Vacuum Cleaner to Clean High Places

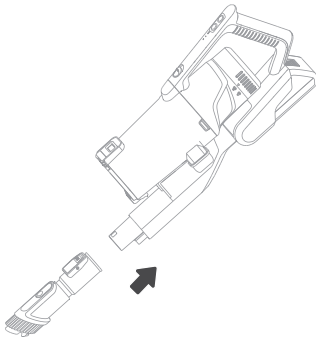

Remove the handheld vacuum cleaner to clean the high places.

Please press the front buckle release button to detach the handheld vacuum cleaner from the wand. To attach an accessory, simply slide it into the nozzle opening. To remove the accessory, press the lock release button and slide it out.




Attention


- 1.All accessories are applicable to handheld vacuum cleaners and wand components.
- 2.To prevent air duct clogging, remove large pieces of trash (such as paper and packaging film) from the area first.
- 3.It is strictly prohibited to modify the entire machine, accessories, or replace the power cord or battery.

Use the Wand to Clean High Places

To remove the main brush from the wand, press the brush release button at the bottom of the wand and lift it out. To reinstall, align with the suction inlet of the handheld appliance's wand and slide in until a "click" is heard.

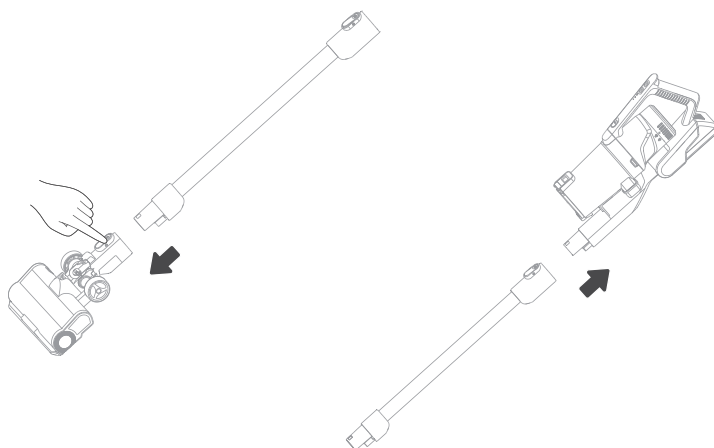

Remove accessories from the rack by pressing the latch release button and pulling them off. Align and insert the handheld appliance or wand assembly until you hear a "click" sound.

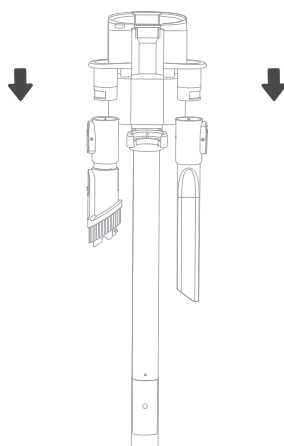


Use of Base Station



Attention

1. Do not use the base station without the dust bag, filter assembly and air outlet cover installed;
2. When cleaning the base station, turn off both the machine and base station switches, unplug from the socket, and disconnect power supply;
3. The charging mode and dust collection function cannot be used simultaneously.

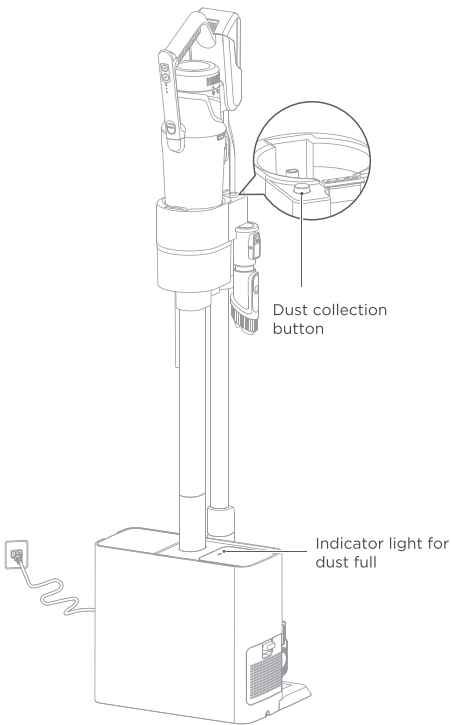

Usage steps.


1. Place the base station vertically on level ground and connect the power supply plug. Place the handset on top of the base station, where its indicator light will start flicking and the battery will begin charging.
2. Press the dust collection button on the base station to automatically open the cup bottom and suck the dust inside into the base station's dust bag. The dust collection action will stop automatically after 20 seconds. If you want to stop the operation, press the button again.
3. When the handset is removed from the base station assembly, it stops collecting dust and charging. Before completely detaching from the base station dust chamber, the cup bottom of the handset will be closed.

Use of Base Station



Attention

1. Please replace the dust bag promptly when the Indicator light for dust full is flashing red.
2. After replacing the dust bag, if the Dust Full indicator remains flashing red, please check for clogging in the base station elbow tube and filter. If clogging is found, clean the inside of the base station elbow.
3. The filters should be cleaned every three months and must be completely dried before installation and use.

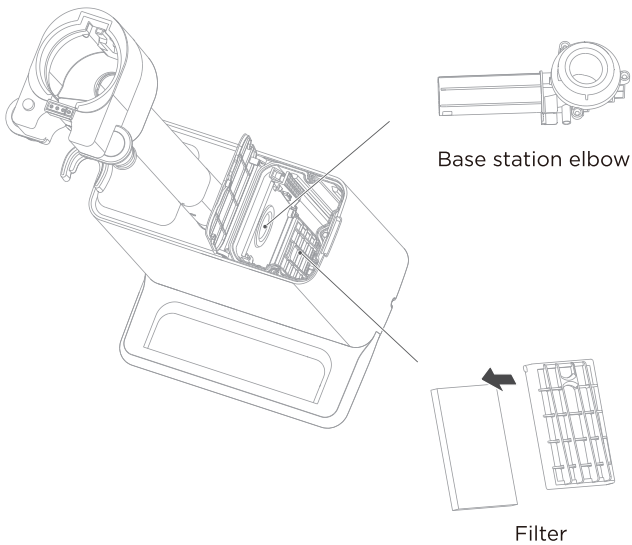

Storage and Placement of Machines




Attention

The machine must be placed on level ground when used on the body to prevent collapse and damage. Handle with care at all times to avoid damaging the machine.


Storage of Handheld Vacuum Cleaner

Align the vacuum cleaner's dust cup with the suction inlet of the dust collector assembly, gently place it on the body as shown in the figure below, and then leave once it is stably positioned.

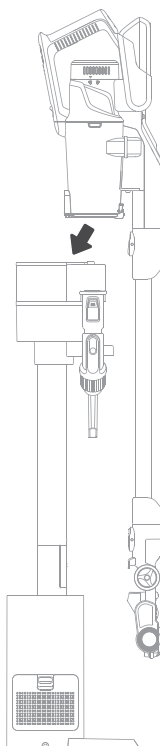

Disassemble the Dust Collector Assembly

Insert a screwdriver into the runway-shaped hole and press down on the removal latch of the base station while pulling up on the metal tube of the dust collector assembly.

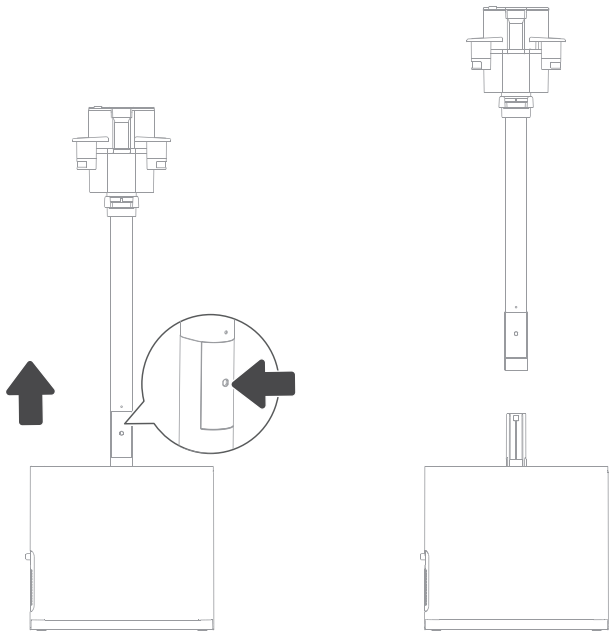

Dust Cleaning Inside the Dust Cup




Attention


- 1.The parts in the dust cup can be washed with water.
- 2.The parts should be thoroughly dried and inspected before reinstalling.

To maintain the vacuum cleaner's suction power, regularly clean the dust. There are three ways to do so.

- 1.The dust in the dust cup of the handset is automatically cleaned out by the base station, following the instructions provided.
- 2.Please remove the main unit as shown in the illustration, pull down the latch of the cup bottom, and then dump the dust.

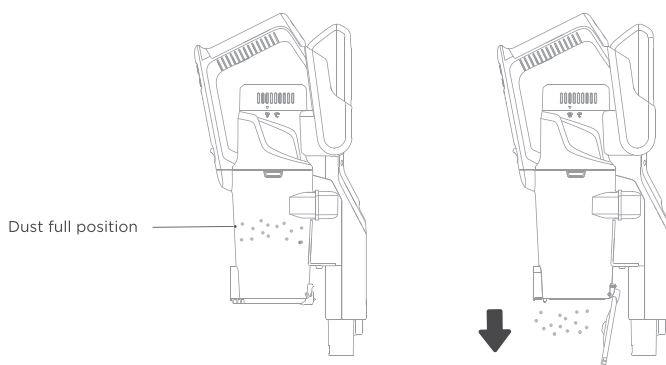


3. After laying the machine flat, press the dust cup release button to remove the dust cup assembly. Then detach and turn over the dust cup filter assembly to dump the dust.

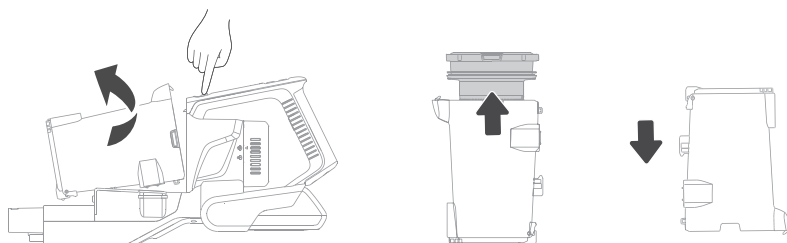


Removing and Cleaning the Filter Cotton Assembly

- 1.Remove the dust cup from the machine and lay it vertically, and take out the internal parts of the dust cup.

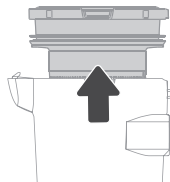

- 2.Pull the filter cotton handle and take out the filter cotton assembly.

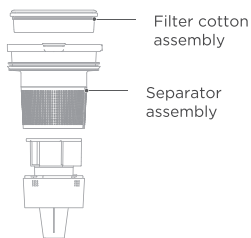

Attention

- 1.When the suction power of the hand vacuum decreases, wash and thoroughly dry the dust cup filter before installing and using it.



- 2.The dust cup capacity should not exceed the Max line to maintain optimal dust collection.
- 3.Ensure dust collection is complete before using the hand vacuum.
- 4.Reposition the handstick on the base station before activating the dust collection mode.

CLEANING AND MAINTENANCE


Disassembling and Cleaning of Vent HEPA Filter




Attention

1. Please pay attention to sharp objects such as glass to prevent injury;
2. All parts must be completely dried before they can be mounted and used;
3. Do not rub or exert brute force on the HEPA filter;
4. When assembling, please make sure that the HEPA filter is mounted in place;
5. Do not continue to use the HEPA filter when it is damaged or insufficiently cleaned and maintained.

1. After the machine is laid flat as shown in the figure, hold the machine with one hand, rotate the air vent cover with the other hand counterclockwise, and take off the cover vertically to the right.

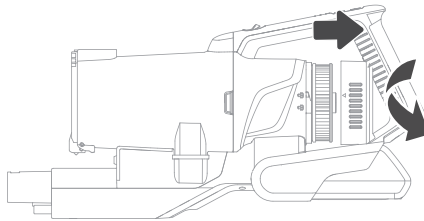

2. Remove the air vent cover, and remove the vent HEPA filter vertically to the right. The HEPA filter can be washed gently with water, but not rubbed by brute force. After being fully dried, mount it back according to the above disassembly steps.

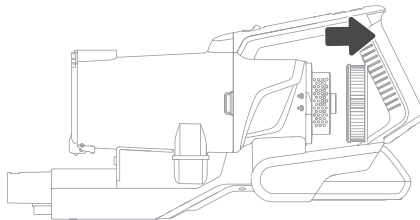


Cleaning and Maintenance of Dust Bag in Base Station




Attention


Without installing the dust bag, the dust box cover of the base station cannot be closed.

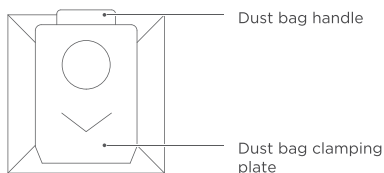


1. Open the top cover of the base station.

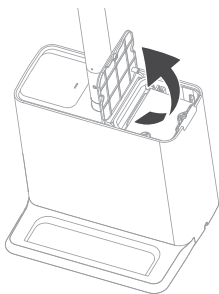


2. Hold the handle on the cardboard of the dust bag.

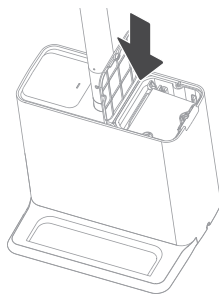

3. Pull up the cardboard handle of the dust bag, Remove the dust bag.

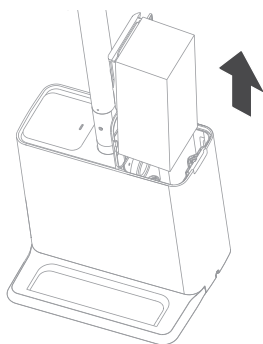

4. Align the clamping plate of dust bag with the limiting slot of the base station, and push it down to install the dust bag in place.

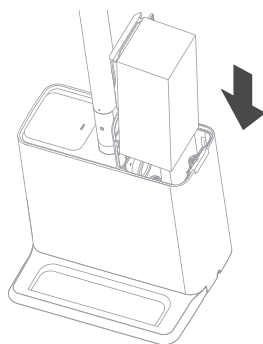


Dismantling and Replacing the Cotton Filter of the Base Station




Attention

Before disassembling or replacing the base station's filter cotton, please remove the dust bag. For instructions, refer to Cleaning and Maintenance of Base Station Dust Bags on the previous page.

1. Hold the handle on the upper part of the filter cotton bracket and take out the filter assembly.

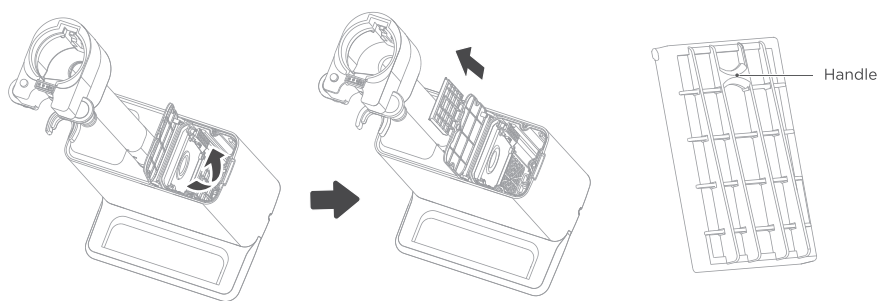


2. Remove the filter cotton from the bracket and clean it to dry.
3. Install the filter cotton assembly in place in the direction indicated by the arrow.

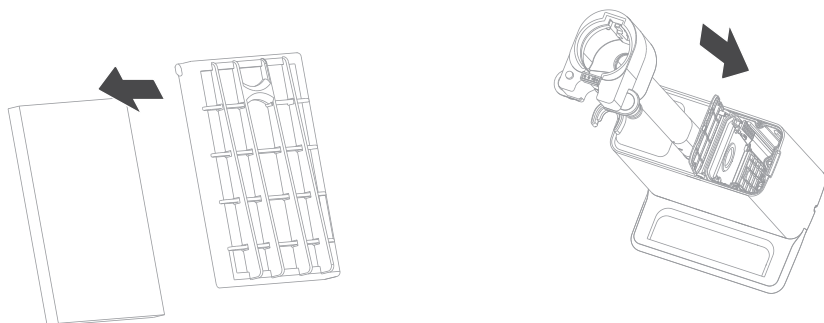


Cleaning and Maintenance of HEPA for Base Station Ventilation


1. Press down on the button of the air outlet panel and remove the air outlet panel assembly.

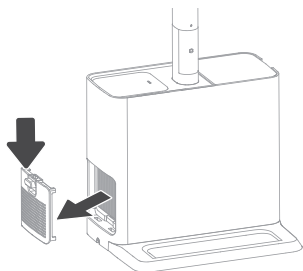


2. Disassemble HEPA assembly.

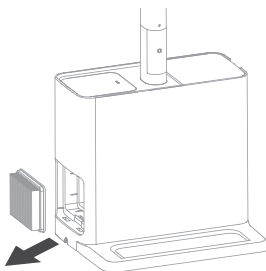


3. Place the HEPA filter on the trash can to remove any external dust and debris.

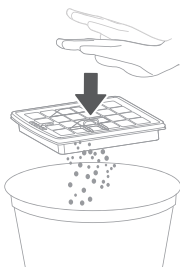

4. Use tap water to clean the HEPA assembly.

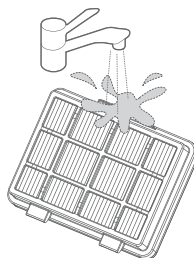

5. After the HEPA module is completely dry, reassemble the HEPA module in the reverse order of disassembly.

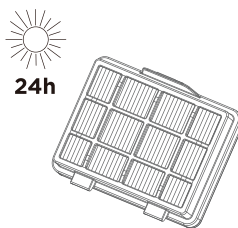

Attention

1. Please pay attention to sharp objects such as glass to prevent injury;
2. All parts must be completely dried before they can be mounted and used;
3. Do not rub or exert brute force on the HEPA filter;
4. When assembling, please make sure that the HEPA filter is mounted in place;
5. Do not continue to use the HEPA filter when it is damaged or insufficiently;
6. Never operate vacuum without dust bags, filters and filter covers in proper position.

Cleaning and Maintenance of Electric Floor Brushes


Dismantling and cleaning of the washing head of the electric brush




Attention

- 1.To avoid affecting the operation of the electric brush's washing head, please clean and maintain the brush wheels when they are entangled or dirty;
- 2.When disassembling and maintaining, please ensure that the operation of the electric brush's washing head is stopped.
- 3.The brush head should not be cleaned with water. Use a brush to remove dust stuck on the brush wheel.
- 4.Steps for dismantling and cleaning of the washing head of the electric brush:

- (1). Press the button to remove the electric brush.

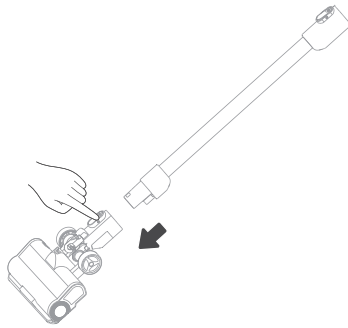

- (2). Press the release button of the brushroller, pull out the assembly to one side, remove and clean it. After cleaning, follow the disassembly procedure to reinstall.

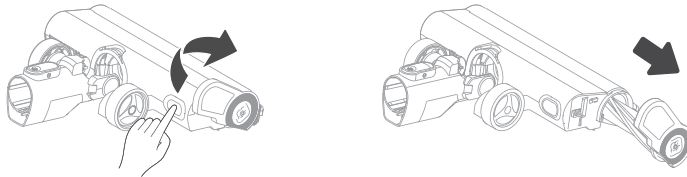

TROUBLE SHOOTING


In the case of any abnormalities in the use of this product please refer to the table below first.

Abnormality	Possible Cause	Treatment
3 indicators flash	<ul style="list-style-type: none"> Floor brush or mite removal brush entangled during rolling Too high or too low use ambient temperature 	<ul style="list-style-type: none"> Clean floor brush or mite removal brush Please use in a proper environment
Electric floor brush does not work	<ul style="list-style-type: none"> Large trash rolled in (packaging film, etc.) Rolling brush entangled in hair, etc. 	<ul style="list-style-type: none"> Remove hairs wrapped around rolling brush Remove trash
Running time becomes shorter	<ul style="list-style-type: none"> Battery ages Too high or too low use ambient temperature Battery not fully charged 	<ul style="list-style-type: none"> Contact the seller or after-sales service personnel to purchase a new battery Use in a proper environment Charge the vacuum cleaner
Suction loss	<ul style="list-style-type: none"> Excessive dust in dust cup Dust cup cotton filter clogged Floor brush or accessory suction inlets clogged Not fully dried after washing 	<ul style="list-style-type: none"> Clean up trash in time Clean cotton filter Remove blockage Dry the washed parts in a cool place for use
Unable to charge	<ul style="list-style-type: none"> Too low or too high ambient temperature when charging 	<ul style="list-style-type: none"> Charge the vacuum cleaner in an environment with proper temperature (5°C-40°C)
Battery leakage	<ul style="list-style-type: none"> Battery not used for a long time 	<ul style="list-style-type: none"> Replace the battery
The inlet of the base station is blocked	<ul style="list-style-type: none"> There is dust or plenty of waste inside the base station suction inlet 	<ul style="list-style-type: none"> For details on cleaning the base station suction inlet, refer to "Cleaning the Base Station Inlet " on the next page


TROUBLE SHOOTING

If there is a blockage in the inlet of the base station, handle it as follows:

1. First detach the dust collector assembly and directly attach the handheld vacuum to the base station. Activate high speed mode to efficiently gather dust inside the wand.

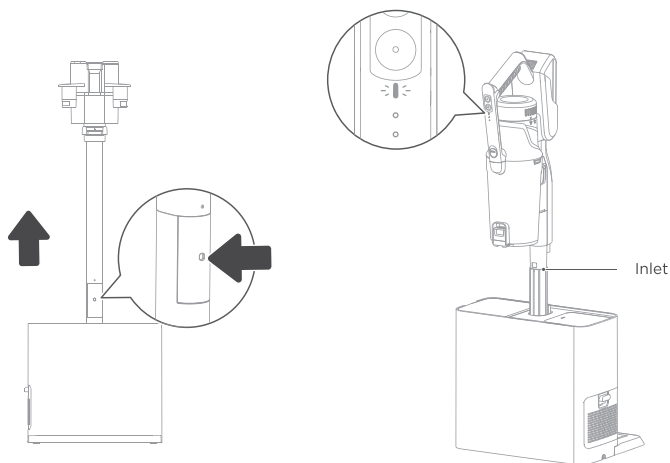




2. Install the whole machine back as shown in the picture, press the duct collection button and observe whether the Dust Full Indicator is off.

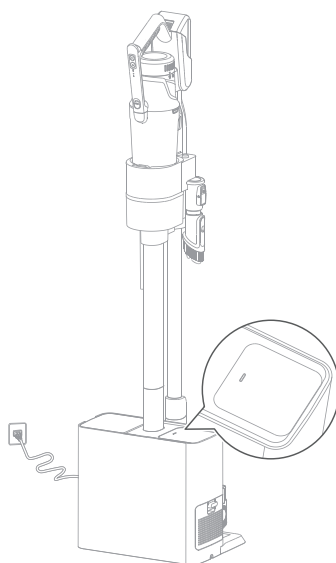


TROUBLE SHOOTING

3. If the Dust Full indicator still flashes red:

- 1) Remove the dust bag assembly and use tools to clean the blockage inside the bent pipe.
- 2) Install a crevice tube on the handset to vacuum the dust in the dust box and prevent dust from being sucked into the motor.
- 3) After cleaning the dust box, install the dust bag, start the dust collection mode, and observe whether the Dust Full indicator is off.

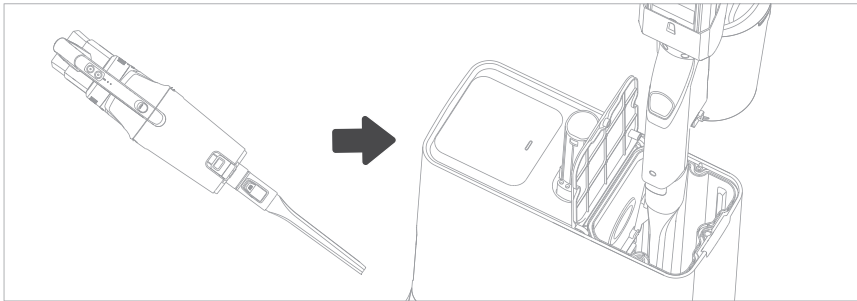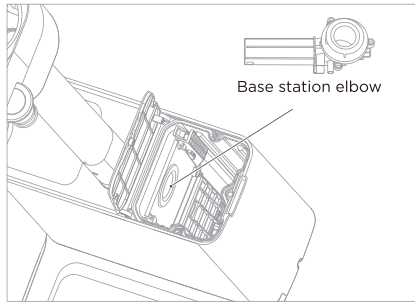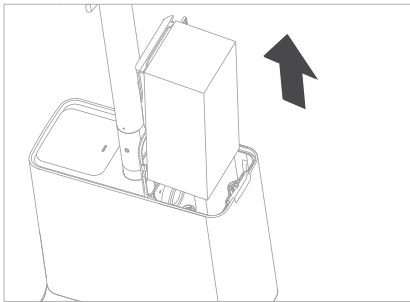

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.


All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DISPOSAL AND RECYCLING

Important instructions for environment

Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

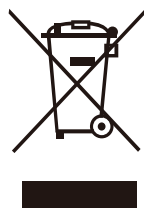

Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.

